


# Sun Shield Installation





Insert ¼" supplied screws through top and bottom controller mounting brackets, through sun shield, and through supplied unistrut slots.

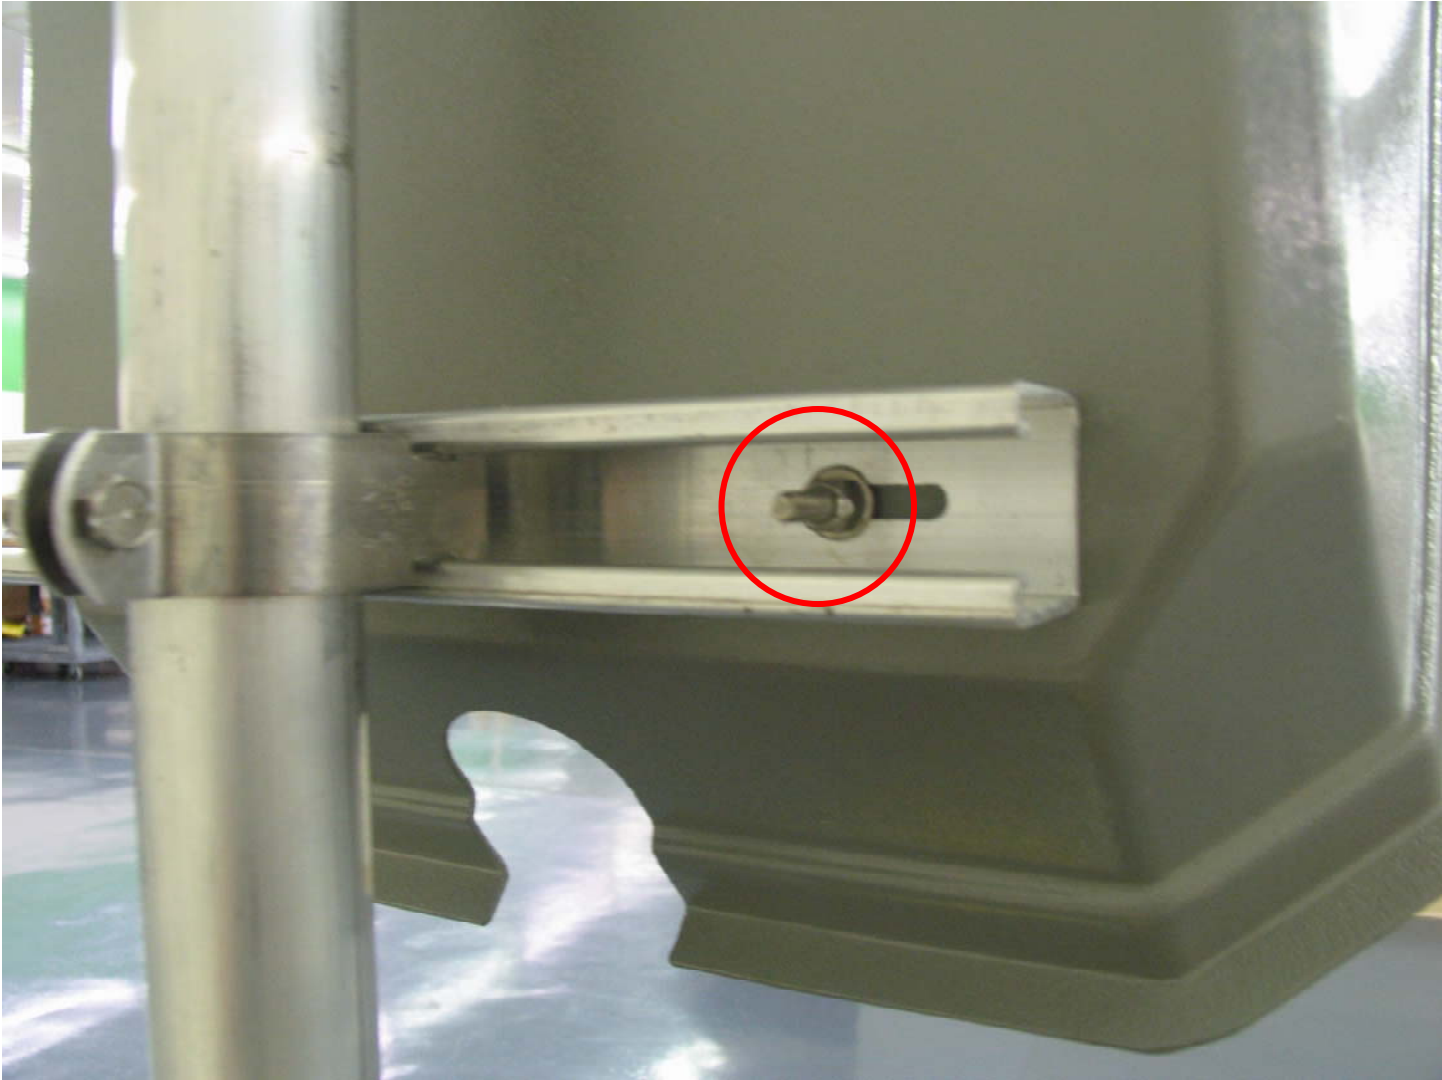

Install flat washer and locking nut.



Install unistrut to the pipe column with the supplied clamps.